




FTDI CDM INSTRUCTIONS

USB to Serial Driver


The EPT-232R-US-R1 uses the ftdibus.sys driver. This driver is loaded upon connection of the USB to Serial Cable to the PC by the ftdibus.inf file. To install these two files onto your PC, use the FTDI Combined Driver Model CDM 2.08.24 WHQL Certified. The installation of the CDM 2.08.24 is easily accomplished using the executable. Just download the executable

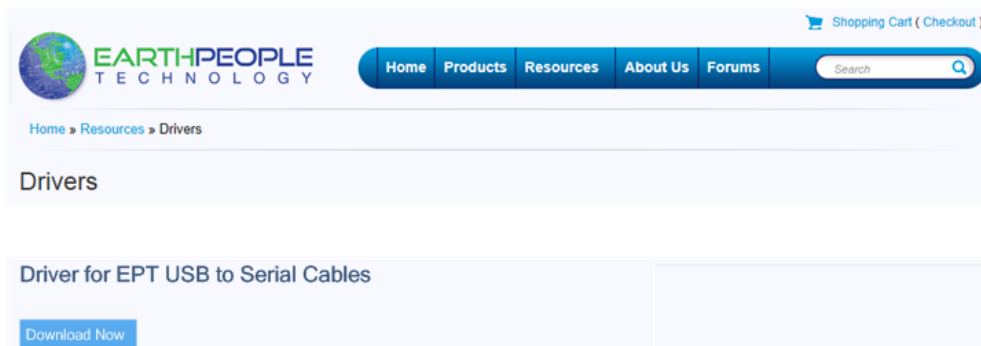


When the download is complete, click Run on the banner to start the install of the driver files.



Click on the Run button.

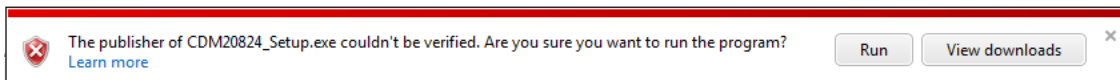

Click on the Run button again. The Console will come up and indicate the installation and completion of the drivers.

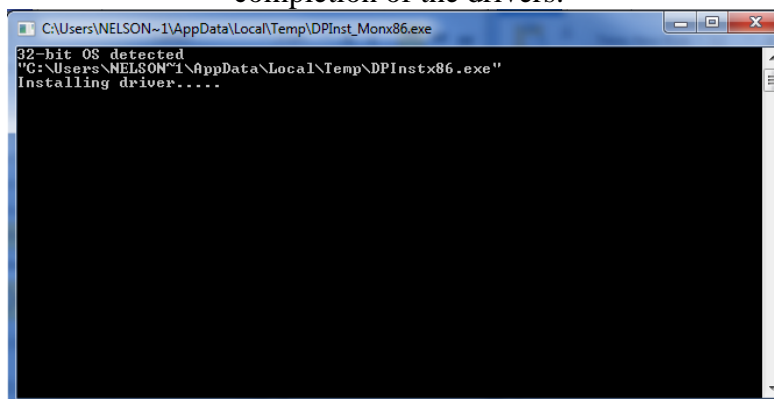

The driver files will automatically install in the System Registry.



FTDI CDM INSTRUCTIONS

A screenshot of a Windows command prompt window. The title bar reads "C:\Users\NELSON-1\AppData\Local\Temp\DPInst_Monx86.exe". The text inside the window shows the following output:

```
32-bit OS detected  
"C:\Users\NELSON-1\AppData\Local\Temp\DPInstx86.exe"  
Installing driver.....  
FTDI CDM Driver Installation process completed.
```

When this is complete, the drivers are installed and the EPT-232R-US-R1 can be connected to the PC and used.